

DMX/負荷名称 表(DMX-①)

1	S	2	T	3	R	4	S	5	T	6	R				
客席FL 1		客席FL 2		客席FL 3		客席FL 4		客席FL 5		客席FL 6					
7	R	8	S	9	T	10	R	11	S	12	T				
客席FL 7		客席FL 8		客席FL 9		客席FL 10		客席FL 11		客席FL 12					
13	T	14	R	15	S	16	T	17	R	18	S				
客席FL 13		客席FL 14		客席FL 15		客席FL 16		客席FL 17		客席FL 18					
19	R	20	S	21	T	22	R	23	S	24	T				
客席 1	客席 2	客席 3	客席 4	客席 5	客席 6	客席 7	客席 8	客席 9	客席 10	客席 11	客席 12				
天井DL1	天井DL2	天井DL3	天井DL4	天井DL5	天井DL6	天井DL7	天井DL8	DL1F棧敷上	DL1F棧敷下	DL1F後部	DL2F棧敷上				
31	T	32	R	33	S	34	T	35	R	36	S				
客席13	客席14	客席15	客席16	客席17	客席18	客席19	客席20	客席21	客席22						
DL2F棧敷下	DL2F後部	BL壁下段上	BL壁下段下	BL壁下段後	BL壁上段上	BL壁上段下	BL壁上段後	予備	予備						
43	S	44	T	45	R	46	S								
UH 1		UH 2		UH 3		UH 4									
#71 上		#72 上		#63 上		#22 上									
47	R	48	S	49	T	50	R								
UH 5		UH 6		UH 7		UH 8									
#71 下		#72 下		#63 下		#22 下									
51	T	52	R	53	S	54	T	55	R	56	S	57	T	58	R
1B上下 1	1B上下 2	1B上下 3	1B上下 4	1B中 1	1B中 2	1B中 3	1B中 4								
#W/作業灯	#72	#78	#W	#W/作業灯	#72	#78	#W								
59	S	60	T	61	R	62	S	63	T	64	R	65	S	66	T
2B上下 1	2B上下 2	2B上下 3	2B上下 4	2B中 1	2B中 2	2B中 3	2B中 4								
#W	#72	#78	#W	#W	#72	#78	#W								
67	R	68	S	69	T	70	R	71	S	72	T	73	R	74	S
3B上下 1	3B上下 2	3B上下 3	3B上下 4	3B中 1	3B中 2	3B中 3	3B中 4								
#W/作業灯	#72	#78	#W	#W/作業灯	#72	#78	#W								
75	T	76	R	77	S	78	T	79	R	80	S	81	T	82	R
4B上下 1	4B上下 2	4B上下 3	4B上下 4	4B中 1	4B中 2	4B中 3	4B中 4								
#W	#72	#78	#W	#W	#72	#78	#W								
83	S	84	T	85	R	86	S	87	T	88	R	89	S	90	T
1S 1	1S 2	1S 3	1S 4	1S 5	1S 6	1S 7	1S 8								
91	R	92	S	93	T	94	R	95	S	96	T	97	R	98	S
1S 9	1S 10	1S 11	1S 12	1S 13	1S 14	1S 15	1S 16								
99	T	100	R	101	S	102	T	103	R	104	S	105	T	106	R
2S 1	2S 2	2S 3	2S 4	2S 5	2S 6	2S 7	2S 8								
107	S	108	T	109	R	110	S	111	T	112	R	113	S	114	T
2S 9	2S 10	2S 11	2S 12	2S 13	2S 14	2S 15	2S 16								
115	R	116	S	117	T	118	R	119	S	120	T	121	R	122	S
3S 1	3S 2	3S 3	3S 4	3S 5	3S 6	3S 7	3S 8								
123	T	124	R	125	S	126	T	127	R	128	S	129	T	130	R
3S 9	3S 10	3S 11	3S 12	3S 13	3S 14	3S 15	3S 16								

131	S	132	T	133	R	134	S	135	T	136	R	137	S	138	T
4S 1		4S 2		4S 3		4S 4		4S 5		4S 6		4S 7		4S 8	
139	R	140	S	141	T	142	R	143	S	144	T	145	R	146	S
4S 9		4S 10		4S 11		4S 12		1CL前 1		1CL前 2		1CL前 3		1CL前 4	
147	T	148	R	149	S	150	T	151	R	152	S	153	T	154	R
1CL前 5		1CL前 6		1CL後 1		1CL後 2		1CL後 3		1CL後 4		1CL後 5		1CL後 6	
155	S	156	T	157	R	158	S	159	T	160	R	161	S	162	T
2CL 1		2CL 2		2CL 3		2CL 4		2CL 5		2CL 6		2CL 7		2CL 8	
163	R	164	S	165	T	166	R	167	S	168	T	169	R	170	S
2CL 9		2CL 10		2CL 11		2CL 12		2CL 13		2CL 14		2CL 15		2CL 16	
171	T	172	R	173	S	174	T	175	R	176	S	177	T	178	R
3CL 1		3CL 2		3CL 3		3CL 4		3CL 5		3CL 6					
179	S	180	T	181	R	182	S	183	T	184	R	185	S	186	T
BAL 1		BAL 2		BAL 3		BAL 4		BAL 5		BAL 6		FS上 1		FS上 2	
												凸×3		凸×3	
187	R	188	S	189	T	190	R	191	S	192	T	193	R	194	S
FS上 3		FS上 4		FS上 5		FS上 6		FST下 1		FST下 2		FST下 3		FST下 4	
1M×2		凸×3		凸×3		空き回路		凸×3		凸×3		1M×2		凸×3	
195	T	196	R	197	S	198	T	199	R	200	S	201	T	202	R
FST下 5		FST下 6		花F 1		花F 2		FC前 1		FC前 2		FC前 3		FC前 4	
凸×3		空き回路													
203	S	204	T	205	R	206	S	207	T	208	R	209	S	210	T
F 1		F 2		F 3		F 4									
#72		#W		#78		#W									
211	R	212	S	213	T	214	R	215	S	216	T	217	R	218	S
FC上 1		FC上 2		FC上 3		FC上 4		FC上 5		FC上 6		FC上 7		FC上 8	
219	T	220	R	221	S	222	T	223	R	224	S	225	T	226	R
FC上 9		FC上 10		FC上 11		FC上 12		FC上 13		FC上 14		FC上 15		FC上 16	
												直/調		直/調	
227	S	228	T	229	R	230	S	231	T	232	R	233	S	234	T
FCT下 1		FCT下 2		FCT下 3		FCT下 4		FCT下 5		FCT下 6		FCT下 7		FCT下 8	
235	R	236	S	237	T	238	R	239	S	240	T	241	R	242	S
FCT下 9		FCT下 10		FCT下 11		FCT下 12		FCT下 13		FCT下 14		FCT下 15		FCT下 16	
												直/調		直/調	
243	T	244	R	245	S	246	T	247	R	248	S	249	T	250	R
FC奥 1		FC奥 2		FC奥 3		FC奥 4		FC奥 5		FC奥 6		FC奥 7		FC奥 8	
LHO 72		LHO 59		LHO 22		LHO 40									
251	S	252	T	253	R	254	S	255	T	256	R	257	S	258	T
FC奥 9		FC奥 10		FC奥 11		FC奥 12		FC奥 13		FC奥 14		FC奥 15		FC奥 16	
								LHO 72		LHO 59		LHO 22		LHO 40	

扶桑文化会館

〒480-0102 愛知県丹羽郡扶桑町大字高雄字福塚200
Tel 0587-93-9000 Fax 0587-93-4500

ホール備品 DMX①/負荷名称

※ ホールには、VSDマシン×2台、NCDマシン×2台、移動型調光器(20A×3回路・合計最大30A)×8台があり、DMX番号
を固定しています。持ち込み機器につきましては、DMX② 1～512chをご利用ください。

VSDマシン

No.1	259	R	260	S	No.2	261	T	262	R
	VSD-1-1		VSD-1-2			VSD2-1		VSD-2-2	
	右回転		左回転			右回転		左回転	

NCDマシン

No.1	263	S	264	T	265	R	266	S
	NCD-1-1		NCD-1-2		NCD-1-3		NCD-1-4	
	レンズ側右回転		レンズ側左回転		光源側右回転		光源側左回転	

No.2	267	T	268	R	269	S	270	T
	NCD-2-1		NCD-2-2		NCD-2-3		NCD-2-4	
	レンズ側右回転		レンズ側左回転		光源側右回転		光源側左回転	

移動型調光器

No.1	271	R	272	S	273	T
	PD-1-1		PD-1-2		PD-1-3	

No.2	274	R	275	S	276	T
	PD-2-1		PD-2-2		PD-2-3	

No.3	277	R	278	S	279	T
	PD-3-1		PD-3-2		PD-3-3	

No.4	280	R	281	S	282	T
	PD-4-1		PD-4-2		PD-4-3	

No.5	283	R	284	S	285	T
	PD-5-1		PD-5-2		PD-5-3	

No.6	286	R	287	T	288	T
	PD-6-1		PD-6-2		PD-6-3	

No.7	289	R	290	S	291	T
	PD-7-1		PD-7-2		PD-7-3	

No.8	292	R	293	S	294	T
	PD-8-1		PD-8-2		PD-8-3	

扶桑文化会館

〒480-0102 愛知県丹羽郡扶桑町大字高雄字福塚200
Tel 0587-93-9000 Fax 0587-93-4500